


Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Z-System®			Z5c Implants														
			Soft Bone					Hard Bone (Mandible)									
								In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Click here to view PDF.									
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Slow Taper	4.0	3.2	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Slow Taper	5.0	3.7	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.

NOTE: Surgeon preference overrules this suggestive protocol

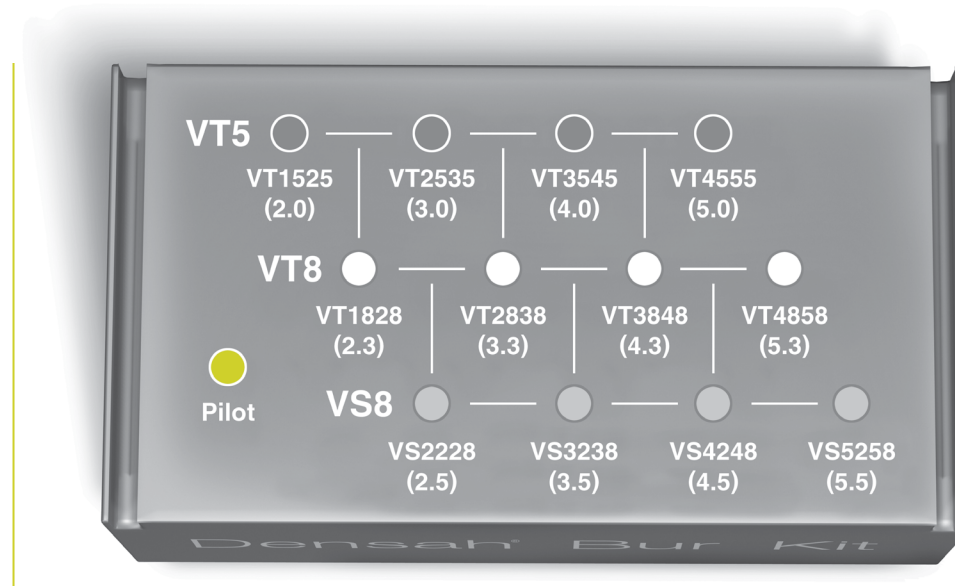


Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Z-System®			Z5m(t) Implants														
			Soft Bone					Hard Bone (Mandible)									
								In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Click here to view PDF.									
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	4.0	1.7	Pilot	VT1828 (2.3)	VT2535* (3.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Taper	5.0	2.3	Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	

*Denotes implant placement.

NOTE: Surgeon preference overrules this suggestive protocol

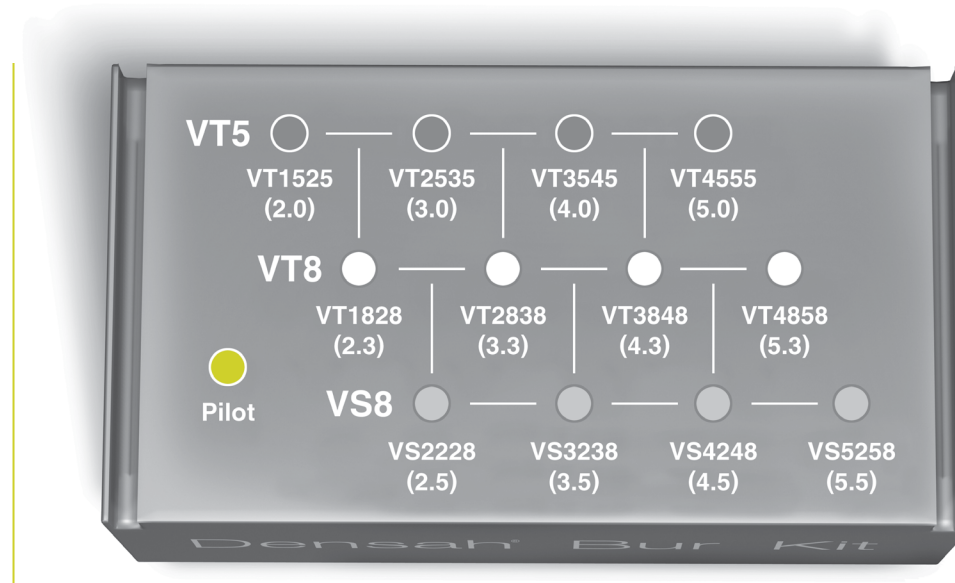

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Z-System®			Z5m Implants														
			Soft Bone					Hard Bone (Mandible)									
								In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Click here to view PDF.									
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Straight	3.6	3.6	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Straight	4.0	4.0	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Straight	5.0	5.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.

NOTE: Surgeon preference overrules this suggestive protocol